


Step by Step Installation Instructions for Installing your Turn@bout®

You will need the following tools for installation

- Power Drill
- Tape Measure
- Pencil



Installation Kit Includes: Turn@bout®, drill bits, hex wrench and template for drilling holes.

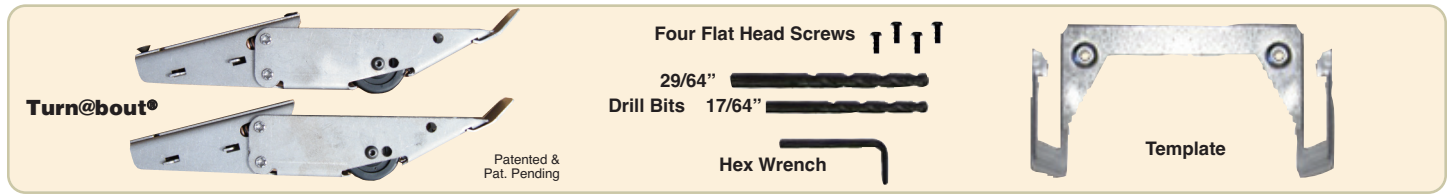

Step 1: Measure & Mark


Raise pallet jack to full height.

For 48" forks.

Measure 21" from back of pallet jack, and mark both forks.

For 42" forks.


Measure 18" from back of pallet jack, and mark both forks.

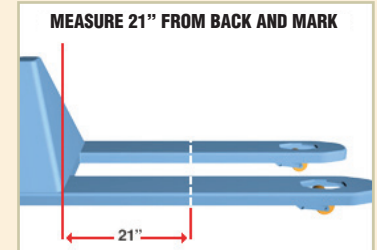

Step 2: Attach Template

Align side of template with mark as shown.

Place template flat on top of fork and slide to outside edge.

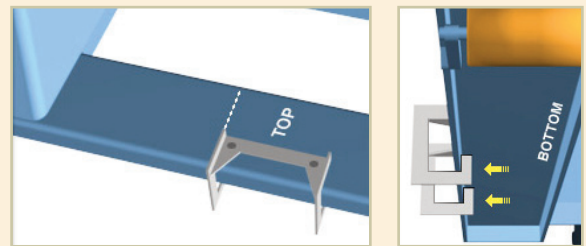

Step 3: Drill Holes

Hold template firmly in place.


Drill pilot hole with smaller 17/64" drill bit.

Temporarily drop-in one screw to help keep template in place.

Drill second pilot hole.

Remove Template.

Then use larger 29/64" drill bit to enlarge this hole.

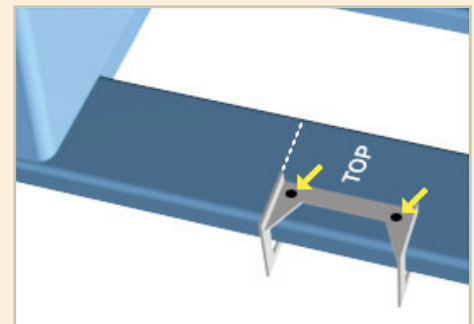


Step 4: Install

Place Turn@bout® as shown and install screws.

Press up on rear of the Turn@bout® to make sure that it is straight and moves freely.

Repeat all steps for other side/fork.

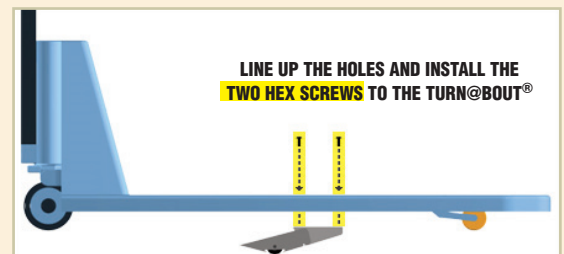

Installation Complete

Place Turn@bout® labels onto handle of pallet jack.

You are done! Enjoy the increased maneuverability by 72%. And no more wide turns or having to kick or wrestle the pallet jack into position.



